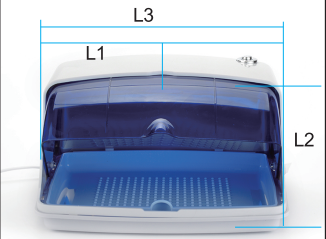


06 TECHNICAL SPECIFICATION

	Model	Dimension			Weight
		L1(mm)	L2(mm)	L3(mm)	
	A	145	170	290	1300(g)

- ❑ Watt: 5 w
- ❑ Package size: 315×245×175mm
- ❑ Voltage /Frequency: A C (220-240V/50Hz) (110-120V/60Hz)
- ❑ UV lamp wavelength 254nm

07 STERILIZATION OBJECT

Tools, Beauty & Hairdressing tools, Kitchen tools etc.

08 MAINTENANCE

- ❑ Using the Nature Cleaner cleaning the product regularly, do not use Acid, Alkali and Corrosive or Toxic cleaner to clean it.
- ❑ Sterilizer must put the dry and stable place.
- ❑ Asking the professional person to check the item when it break down.
- ❑ To change the UV lamp, pls remove the Cover first then change it.

DISTRIBUTED BY:

Shanghai Bluerise Trading Co., Ltd.

For customer support,

e-mail: bluerise@bluerise.cn

Instagram: [bluerise_us](https://www.instagram.com/bluerise_us)

Facebook: [@blueriseus](https://www.facebook.com/blueriseus)

www.bluerise.cn

BR Bluerise

Instructions




01 PACKING LIST

- 1 9003 Main body
- 2 AC Power line
- 3 Instructions
- 4 Certificate

02 PARTS INSTRUCTION

- 1 Frame
- 2 Switch
- 3 Power wire
- 4 Base plate
- 5 pallet
- 6 Cover

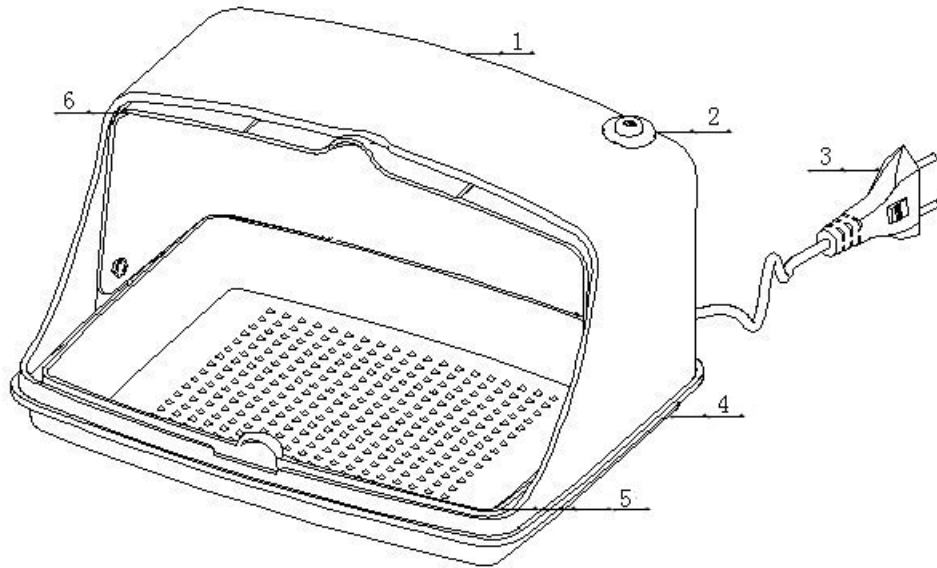

MAINTENANCE

- Using the Nature Cleaner cleaning the product regularly, do not use Acid, Alkali and Corrosive or Toxic cleaner to clean it.
- Sterilizer must put the dry and stable place.
- Asking the professional person to check the item when it break down.
- To change the UV lamp, pls remove the Cover first then change it.



YM-9003

03 USING PLACE

- Home, Refectory, Office, Washroom, Kindergarten, Hotel, Beauty care center, Nail care center, Barbershop, Gym, SPA center, Kitchen, etc.

04 THE DISINFECTION OF SUBSIDIARY

- UV Sunlight Sterilization.—safety.

■ Use for 10-20 minutes.

05 WHAT IF YOU RECEIVE THE PRODUCT AND THE LIGHT DOESN'T WORK?

- Check if you are using 110V?
- Check whether the connection of the tube is loose. If the tube is loose, please try to tighten it and try again to see if the light can work normally.