



UV STERILIZER AND DRYER (BR-BE706A)



INSTRUCTION MANUAL

■ Model No.: BR-BE706A

■ Power: 130W

■ Capacity: 17L


INTRODUCTION

Thank you for purchasing our UV Sterilizer with Dryer 706A. Before operating this device, please read the instructions thoroughly and keep this handbook for future reference.

PRODUCT DETAILS



CONTROL PANEL

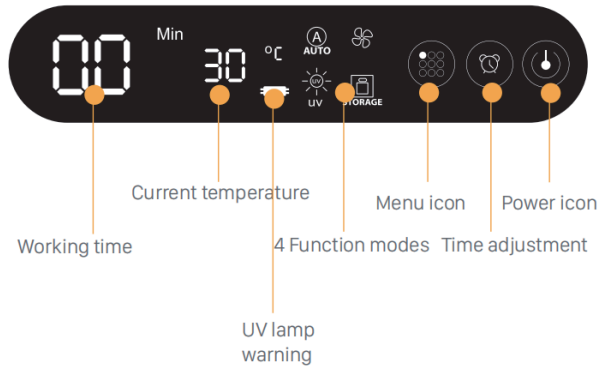

CAUTION!

- Before using the device please read the operating instructions!
- The instructions are part of the product and contain important information on getting started and using the device.
- Always keep the instructions in a safe place for reference!

WIDELY USED IN LIFE

This appliance is generally safe to use with most objects listed below

- ✓ Childrens' toy
- ✓ Cosmetic tool
- ✓ Electronic device (*)
- ✓ Personal care gadget
- ✓ Utensil/glassware Manicure tool
- ✓ Denture

Carefully read your user and care manual of the objects you intend to disinfect or dry with this appliance.

(*)use only STERILIZE-MODE for electric devices as they can be damaged by hot temperatures with DRYING-MODE or AUTO-MODE.

FUNCTIONS

1.Sleepy mode

Plug in, and you can hear one 'Bi' sound. Then it will go into sleepy mode. When it is in sleepy mode, the function and time setting buttons are not working. When open the door, the night light will still be on. If the door is open for more than 5mins, the night light will be off.

2.Standby mode

When It is in sleepy mode. Press the power icon, the display will show '- -'. it is in standby mode. If no other operation, it will go back the sleepy mode after 5mins.


When it is in standby mode, the time adjustment is not working.

When open the door, the night light will be on. If the door does not close in 1 min, there will be a warning sound. And the display will show 'E3'. Close the door, the warning will be off, and display back to '- -'. if don't close the door after 5mins, the night light will be off.

3.Function setting

• Auto function


- When it is in standby mode, press the menu icon once, the display will show as below. It is at the auto function.

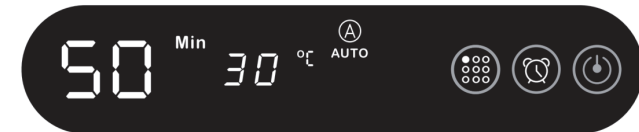

- The default working process is 50mins drying, at the last 10mins, the UV sterilizing function will work together. If no other operation, it will start working automatically after 5 times flashing.
- The time will count down from 50 to 0. The temperature display will show the current temperature inside the container.
- At this function, the drying time and sterilizing time can't adjust. The fan will keep working during this process.
- When time's up, the fans will stop working. There will be a 'Bi-Bi-Bi' sound. And it will switch to the storage function.
- During the working process, press the menu icon to choose another function. Pressing the power icon can stop working.
- During the working process, if open the door, it will make a warning sound, and the display shows 'E3'. The night light will be on. The working process will be paused. if don't close the door for more than 5mins, the program will be stopped, and the night light will be off.

• Sterilizing function


- When it is in standby mode, press the menu icon twice, and the display will show as below. It is at the sterilizing function.

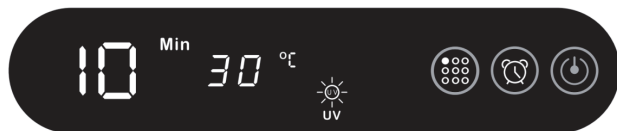

- The default working process is 10mins sterilizing. If no other operation, it will start working automatically after 5 times flashing.
- The time will count down from 10 to 0. The temperature display will show the current temperature inside the container.
- At this function, the sterilizing time can be adjusted to be 5mins or 10mins with the time adjustment icon during or before the process. The fan will keep working during this process.
- When time's up, the fans will stop working. There will be a 'Bi-Bi-Bi' sound. And it will switch to the storage function.
- During the working process, press the menu icon to choose another function. Pressing the power icon can stop working.
- During the working process, if open the door, it will make a warning sound, and the display shows 'E3'. The night light will be on. The working process will be paused. if not close the door for more than 5mins, the program will be stopped, and the night light will be off.

• Drying function

- When it is in standby mode, press the function setting button three times, and the display will show as below. It is at the drying function.

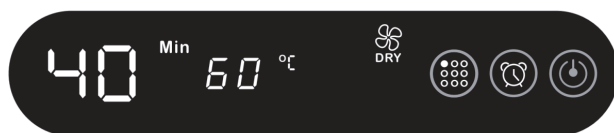

- The default working process is 40mins sterilizing. If no other operation, it will start working automatically after 5 times flashing.
- The time will count down from 40 to 0. The temperature display will show the current temperature inside the container.
- At this function, the sterilizing time can be adjusted to be 30-40-50-60mins with the time adjustment icon during or before the process. The fan will keep working during this process.
- When time's up, the fans will stop working. There will be a 'Bi-Bi-Bi' sound. And it will switch

to the storage function.

- During the working process, press the menu icon to choose another function. Pressing the power icon can stop working.
- During the working process, if open the door, it will make a warning sound and the display shows 'E3'. The night light will be on. The working process will be paused. if not close the door for more than 5mins, the program will be stopped, and the night light will be off.

• Storage function


- When it is in standby mode, press the function setting button four times, and the display will show as below. It is at the storage function.



- The default working process is 72 hours of storage. If no other operation, it will start working automatically after 5 times flashing.
- The time will count down from 72 to 0. The temperature display will show the current temperature inside the container.
- At this function, the time can't be adjusted. It will sterilize 1min every 2 hours and at the same time, the fan will work for 3mins automatically.
- When time's up, the display will be off, and the whole product stops working. There will be a 'Bi-Bi-Bi' sound. It will switch to sleepy mode.
- During the working process, press the menu icon to choose another function. Pressing the power icon can stop working.
- During this function, if open the door and don't close it in 1 min, it will be a warning sound and display show 'E3'. The night light will be on when the door opened. The working process will be paused. if not close the door for more than 5mins, the program will be stopped, and the night light will be off.

UV LAMP WARNING

Normally, the UV lamp warning is OFF, which means the UV lamp is in the available time. If this warning signal is ON, the time life of the UV lamp is END, and the user needs to replace the new lamp.

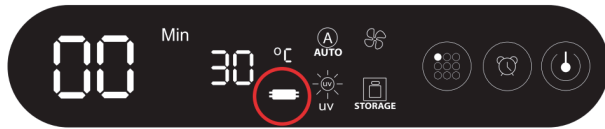

CLEANING AND MAINTENANCE

It is rather simple to maintain this appliance. The only thing you must do is always remember to keep the inside surface spotless and highly reflective.

1. Before cleaning, stop the operation, pull out the plug, and wear gloves
2. The inside surface of the UV sterilizer and the glass should only be cleaned with a clean microfiber towel using only warm distilled water in order to prevent any scratches to the highly polished stainless steel. For stubborn watermarks, try leaving the warm wet microfiber towel on the spot for a longer period, it should wipe off easily afterward.
3. Wipe off moisture with a dry cloth.

REPLACE THE UV LAMP

Uninstall the UV lamp

With a good grip on the bulb, twist the bulb 45 degrees downward. Pull to lower the entire bulb down to take it off the socket.

Install the new UV lamp

To install a new UV lamp, line its prongs up with the slots in both sockets. Push the tube straight up into the sockets, and then rotate it 45 degrees until you feel it locks into place. You can give the lamp a gentle tug to ensure that it is firmly in place.

CAUTION

Do not touch the glass part of the UV lamp with bare hands. Use cotton gloves. If you touch the glass, clean it with a lint-free cloth. Grease or residue on the UV lamp can potentially affect the performance of the bulb.

IMPORTANT SAFEGUARDS:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles.
- Keep this unit out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
- Pull off the plug after use.

- Don't put it in water or pour water on it to wash. Clean it with a soft wet mop.
- Use only containers that have been approved for boiling
- Disconnect the warmer from the power supply before adding water.
- Be careful of the deterioration time of the milk or food.
- To protect against electrical shock do not immerse the cord plug or body in water or other liquid.
- Unplug from the outlet when not in use and before cleaning. But do not use abrasive powder or metal brush.
- Do not let the supply cord hang over the edge of tables or counters or touch hot surfaces.
- Do not place the appliance on or near heat sources such as a gas or electric burner or in a heated oven.
- This appliance is intended to be used in household and similar applications as:
 - Staff kitchen areas in shops, offices, and other working environments
 - Farmhouses
 - by clients in hotels motels and other residential-type environments
 - Bed and breakfast-type environments
- Must not immerse in water for cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

DISTRIBUTED BY:

BLUERISE INTERNATIONAL LLC

For customer support,

E-mail: blueriseinternational@gmail.com